



Originale	Sostituto
Power	Power
Tv	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Enter	OK
PRE-CH	Back / Return
CH LIST	Shift + Smart / List
FAV CH	Fav / Marker / PC
Tools	Setup / OPT /

Originale	Sostituto
Menu	Menu / Home
Return	Shift + Back / Return
Info	Info / Angle
Internet	Smart / List
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Right	Right
Left	Left
Red	Red / Netflix / Search
Enter	Shift + OK
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer



Tools



	Originale	Sostituto	Originale	Sostituto
	Source	 RDS AV INPUT		
	PR+	 CH+ / Page+		
	PR-	 CH- / Page-		
	TTX/MIX	 GOTO TEXT		
	Media.P	 MEDIA DISPLAY		
	Content	 FORMAT PICTURE		
	Guide	 GUIDE EPG		
	Subt	 EQ SUBTITLE		
	<<	 TUNE- << / Tune-		
	Pause	 STEP-FREEZE		
	>>	 TUNE+ >> / Tune+		
	Rec	 REC MODE		
	Play	 SLOW		
	Stop	 HOLD		

