



Originale	Sostituto
Power Receiver	Power
BD	1
DVD	2
DVR / BDR	5
HDMI	0
TV	TV/Radio /
CD	3
NET	7
ADAPTER	Eject / Surround
iPod USB	8
Tuner	6
Video	4
CD-R	9
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-

Originale	Sostituto
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /





Originale		Sostituto		Originale		Sostituto	
	Down		Down		Stop		Stop / Hold
	Return		Back / Return		>>		>> / Preset+
	Auto / Alc / Direct		Info / Angle		1 Tuner		Shift + 1
	Stereo		Sound / Title		2 Tuner		Shift + 2
	Repeat		Green / APP / Repeat		3 Tuner		Shift + 3
	Standard		Shift + Smart / List		Audio DVD		Shift + Audio / Lang I/II
	Random		Blue / Prime Video / Random		4 Tuner		Shift + 4
	Adv. Surr.		Guide / EPG / -/-		Signal Sel		Shift + Setup / OPT / Tools
	<<		<< / Tune-		MCACC		Fav / Marker / PC
	Phase CTRL		Red / Netflix / Search		5 Tuner		Shift + 5
	Play		Play / Slow		6 Tuner		Shift + 6
	>>		>> / Tune+		Sleep		Sleep / Timer
	Status		Exit / Cancel / Clear		Disp		Display / Media
	I<<		I<< / Preset-		7 Tuner		Shift + 7
	Pause		Pause / Step / Freeze		CH Level		Shift + CH+ /
	MPX		Zoom / Size		8 Tuner		Shift + 8
	PQLS		Shift + Menu / Home		A.ATT.		Yellow / YouTube / Repeat





 



















 

 


 

 










 
 

 

 





	Originale	Sostituto		Originale	Sostituto
	9 Tuner	+ Shift + 9			
	Dimmer	+ Shift + Mute / Dimmer			
	CH +	CH / Page+			
	D.Access	+ Shift + D.Menu / Top Menu			
	0 Tuner	+ Shift + 0			
	Class	+ Shift + Display / Media			
	Enter (Class)	+ Shift + OK			
	CH -	CH / Page-			





 

















 











 

 



 

 


 
 



 

 















Originale		Sostituto		Originale		Sostituto	
	Power Source		Power		1		1
	DVD		Shift + 2		2		2
	Top Menu		D.Menu / Top		3		3
	Up		Up		Audio		Audio / Lang I/II
	Left		Left		4		4
	Enter		Shift + OK		5		5
	Enter		OK		6		6
	Right		Right		7		7
	Down		Down		8		8
	Return		Back / Return		9		9
	<<		<< / Tune-		0		0
	Play		Play / Slow		Menu		Menu / Home
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				





Originale		Sostituto		Originale		Sostituto	
	Power Source		Power		1		1
	Tuner		Shift + 6		2		2
	Master Volume		Vol+		3		3
	Master Volume		Vol-		4		4
	Mute		Mute / Dimmer		5		5
	Band		Subtitle / EQ		6		6
	Tune+		>> / Tune+		Disp		Display / Media
	Tune+		Up		7		7
	T.Edit		Text / Goto		8		8
	Preset+		>> / Preset+		9		9
	Preset-		Left		D.Access		D.Menu / Top
	Enter		OK		0		0
	Preset-		<< / Preset-		Class		Shift + Display / Media
	Preset+		Right		Menu		Menu / Home
	Tune-		<< / Tune-		Search		Red / Netflix / Search
	Tune-		Down				
	MPX		Zoom / Size				

