


Originale	Sostituto
 On / Off	 Power
 Mute All	 Shift + Mute / Dimmer
 Mute	 Mute / Dimmer
 Stored	 Smart / List
 CD - DVD	 Shift + 2
 FM - AM	 Shift + TV/Radio / Program
 AUX	 Shift + 7
 TV	 TV/Radio /
 CBL - SAT	 Eject / Surround
 VCR	 Shift + 4
 Library	 Shift + Display / Media
 Up / Tune +	 Up
 DVD Menu	 D.Menu / Top
 Settings	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right

Originale	Sostituto
 Guide	 Guide / EPG / -/--
 System	 Text / Goto
 Down / Tune -	 Down
 Exit	 Exit / Cancel / Clear
 Track/Chap./CH +	 CH+ / Page+
 Volume +	 Vol+
 Track/Chap./CH -	 CH- / Page-
 Volume -	 Vol-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<< Seek	 I<< / Preset-
 I>> Seek	 I>> / Preset+
 Shuffle	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 1	 1
 2	 2

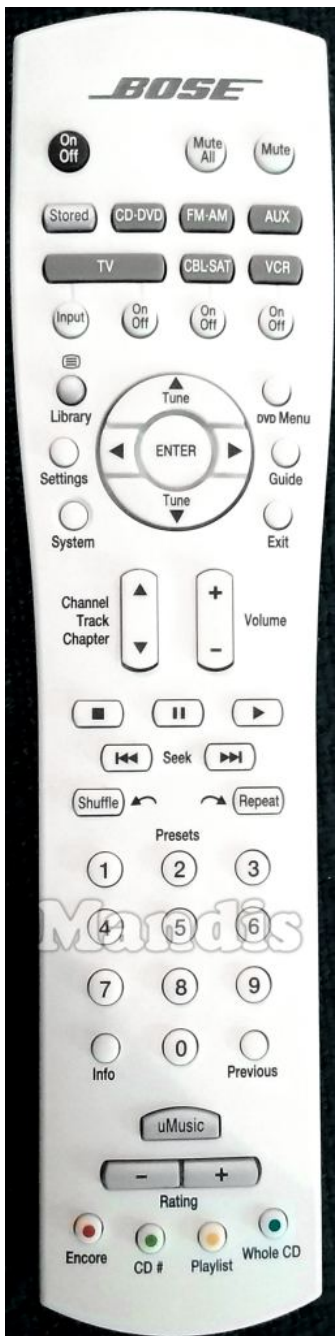



	Originale	Sostituto		Sostituto
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	Info		Info / Angle	
	0		0	
	Previous		Back / Return	
	uMusic		Shift + Smart / List	
	Rating-		Shift + Down	
	Rating+		Shift + Up	
	Encore		Menu / Home	
	CD #		Fav / Marker / PC	
	Playlist		Display / Media	
	Whole CD		Shift + 3	

	Originale	Sostituto

