



Originale	Sostituto
Open / Close	Eject / Surround
TV Input	AV / Input / RDS
TV Power	+ Shift + Power
Power	Power
1	1
2	2
3	3
Vol+	Vol+
4	4
5	5
6	6
7	7
8	8
9	9
Vol-	Vol-
Audio	Audio / Lang I/II
0	0

Originale	Sostituto
Subtitle	Subtitle / EQ
Mute	Mute / Dimmer
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Top Menu	D.Menu / Top
Up	Up
Pop Up / Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home	Smart / List
Home	+ Shift + Menu / Home





	Originale	Sostituto	Originale	Sostituto
	I<<	I<< / Preset-		
	Pause	Pause / Step / Freeze		
	>>I	>>I / Preset+		
	<<	<< / Tune-		
	Play	Play / Slow		
	>>	>> / Tune+		
	Display	Display / Media		
	Stop	Stop / Hold		
	SEN	Info / Angle		

