






 





 

 





 



 

 

 

 



 



 



 



 



 



 

 




 
 
 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		PR-		Ch -
	Red		Red		1		1
	Green/Cass.		Green		2		2
	Yellow/Prog		Yellow		3		3
	Blue/Mem		Blue		4		4
	Violet/Status		Smart		5		5
	Exit		Exit		6		6
	Menu		Menu		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		AV		AV
	OK		Ok		Index/Mark		Info
	Vol+		Vol +		0000		Media
	Vol-		Vol -		SP/LP		Format
	Mute		Mute		<<		<<
	PR+		Ch +		Play		Play






 



 





 




 




 

 

 






 
 




 




 


 

 









	Originale	Sostituto	Originale	Sostituto
	>>			
	Rec			
	Stop			
	Pause			





Originale		Sostituto		Originale		Sostituto	
	Power		Power		PR-		Ch -
	Red		Red		1		1
	Green/Cass.		Green		2		2
	Yellow/Prog		Yellow		3		3
	Blue/Mem		Blue		4		4
	Violet/Status		Smart		5		5
	Menu		Menu		6		6
	Exit		Exit		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		AV		AV
	OK		Ok				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	PR+		Ch +				

