





 



















 
 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 -/--	 Guide
 TV TX	 Text
 OK	 Ok
 Up / CH+	 Up

Originale	Sostituto
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 [≡i]	 Info
 Mix	 Shift + Text
 Brightness	 Shift + 1
 Contrast	 Shift + 2
 Color	 Shift + 3
 Menu	 Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue



