 




 

 

 



 





 

 



 
 
 







 





 



 

 

 



 



 



 

 

 






| Originale | | Sostituto | | Originale | | Sostituto | |
|---|--------------|---|-----------|---|---------------|---|------------|
|  | Standby / On |  | Power |  | i / Status |  | Info |
|  | Sleep |  | Sleep |  | Speakers |  | List |
|  | Dimmer |  | Blue |  | PHASE |  | Shift + 3D |
|  | ECO |  | 3D |  | Signal Sel. |  | AV |
|  | BD |  | 1 |  | Auto / Direct |  | TV/R |
|  | GAME |  | 2 |  | Standard |  | Format |
|  | DVR / BDR |  | 3 |  | Adv. Surr. |  | Subt |
|  | DVD |  | 4 |  | Mute |  | Mute |
|  | SAT / CBL |  | 5 |  | Tools Menu |  | Options |
|  | HDMI |  | 6 |  | Up |  | Up |
|  | MHL |  | Shift + 6 |  | Left |  | Left |
|  | iPod / USB |  | 7 |  | Enter |  | Ok |
|  | CD |  | 8 |  | Right |  | Right |
|  | ADPTER |  | 9 |  | Down |  | Down |
|  | TUNER |  | Guide |  | Home Menu |  | Menu |
|  | TV |  | 0 |  | iPod Ctrl. |  | D. Menu |
|  | NETWORK |  | Pre Ch |  | Return |  | Back |





| Originale | | Sostituto | | Originale | | Sostituto | |
|---|----------|---|----------------|---|-----------------|---|---------------|
|  | Volume+ |  | Vol + |  | Random |  | Text |
|  | Volume- |  | Vol - |  | Disp |  | Shift + Info |
|  | Pause |  | Pause |  | Audio |  | Dual |
|  | BAND |  | Shift + Play |  | SB CH |  | Media |
|  | Play |  | Play |  | CH Level CH Sel |  | Smart |
|  | PTY |  | Shift + Stop |  | CH Level- |  | Ch - |
|  | Stop |  | Stop |  | CH Level+ |  | Ch + |
|  | +Fav |  | Shift + Pre Ch |  | Bass- |  | Shift + Down |
|  | Preset - |  | Shift + I<< |  | Bass+ |  | Shift + Up |
|  | I<< |  | I<< |  | Treble- |  | Shift + Left |
|  | Preset+ |  | Shift + >>I |  | Treble+ |  | Shift + Right |
|  | >>I |  | >>I | | | | |
|  | Tune- |  | Shift + <<< | | | | |
|  | <<< |  | <<< | | | | |
|  | Tune+ |  | Shift + >>> | | | | |
|  | >>> |  | >>> | | | | |
|  | Repeat |  | Shift + Text | | | | |

