


 









 



 



Originale	Sostituto
 Power	 Power
 TV Power	 Shift + Power
 TV TV/AV	 Shift + AV
 TV Vol+	 Shift + Vol +
 TV Vol-	 Shift + Vol -
 TV CH+	 Shift + Ch +
 TV CH-	 Shift + Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 -/--	 Guide
 Showview	 Smart
 Timer Rec	 AV
 TRACKING/V-LOC	 Ch +
 TRACKING/V-LOC	 Ch -
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Cancel	 Back
 Store	 Media
 OSD	 Options
 Display	 Info
 Reset	 3D
 Play	 Play





	Originale	Sostituto		Originale	Sostituto
	<<	 <<			
	>>	 >>			
	Stop	 Stop			
	Pause / Still	 Pause			
	Still Adv	 >>			
	Rec	 REC			
	Void 1	 A Red			
	Void 2	 B Green			

