



 


 
 
 






 

 

 



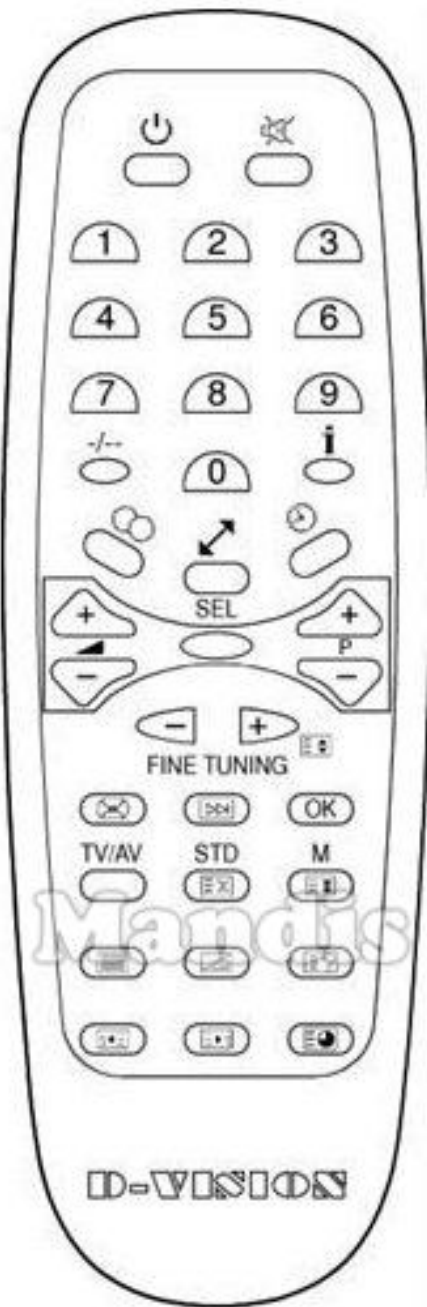




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/AV	 AV
 -/--	 Guide
 i	 Info
 OO	 Dual
 □	 Format
 ⊕ Sleep	 3D

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 (X)	 Exit
 >>I	 >>I
 OK	 Ok
 SEL	 Menu
 Fine Tuing+	 Right
 Fine Tuing-	 Left
 TV/AV	 AV
 STD / [≡X]	 Smart
 M	 Media
 Text	 Text
 [ /≡]	 D. Menu
 Reveal	 TV/R
 [1<≡]	 <<





Originale	Sostituto	Originale	Sostituto
[≡>1]	>>		
[≡O]	SETTINGS OPT Options		

