


































 












 







 


















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DEL	 Exit / Cancel / Clear
 TXT	 Text / Goto
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Rec	 Rec / Rec Mode
 Picture	 Picture / Format
 Play / Pause	 Play / Slow
 <<	 << / Tune-





	Originale	Sostituto	Originale	Sostituto
	Stop	 Stop / Hold		
	Play / Pause	 Pause / Step / Freeze		
	>>	 >> / Tune+		

