



Originale	Sostituto
 Power	 Power
 [+]	 Display / Media
 Mute	 Mute / Dimmer
 Tv/AV	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol+
 Vol-	 Vol-
 Timer	 Sleep / Timer
 1	 1
 N	 D.Menu / Top
 F	 Menu / Home
 2	 2
 3	 3
 4	 4

Originale	Sostituto
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 0	 Shift + 4
 Red	 Red / Netflix / Search
 C	 Exit / Cancel / Clear
 Green	 Green / APP / Repeat
 Blue	 Blue / Prime Video / Random
 Hold	 Shift + Stop /
 Yellow	 Yellow / YouTube / Repeat
 Index	 Info / Angle
 Pause/Step	 Pause / Step / Freeze
 Reveal	 Smart / List





Originale	Sostituto
 Time Text	 TV/Radio /
 Play	 Play / Slow
 Tv/Text	 Text / Goto
 Stop	 Stop / Hold
 >>	 >> / Tune+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 F/T/B	 Zoom / Size
 Power VCR	 Shift + Power
 Programme Up	 CH+ / Page+
 Programme Down	 CH- / Page-

Originale	Sostituto

