 

 

 
 
 
 
 
 
 
 








 
 
 

 
 
 
 
 
 
 
 





Originale	Sostituto
 Power	 Power
 Input	 AV
 USB/My Media	 Media
 Mute	 Mute
 Blank	 Smart
 Ratio	 Format
 Page Up	 Ch +
 Page Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Auto	 0
 Q.Menu	 D. Menu
 Mark	 Exit
 Still	 Info
 Back	 Back
 Play/Pause	 Play

Originale	Sostituto
 Play/Pause	 Pause
 Stop	 Stop
 >>I	 >>I
 I<<	 I<<
 Key.S Up	 >>
 Key.S Down	 <<
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

