



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Green	 Green
 1	 1	 Yellow/FAV+	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 White/FAV-	 Media
 4	 4	 Pause	 Pause
 5	 5	 Mute	 Mute
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 PR+	 Ch +
 9	 9	 PR-	 Ch -
 0	 0	 Up	 Up
 Info	 Info	 Down	 Down
 UHF	 AV	 Right	 Right
 Audio	 Dual	 Left	 Left
 Text	 Text	 OK	 Ok
 Sat/TV	 Subt	 Vol+	 Vol +
 Red	 Red	 Vol-	 Vol -

Originale	Sostituto	Originale	Sostituto
 Green	 Green	 Green	 Green
 Yellow/FAV+	 Yellow	 Blue	 Blue
 Blue	 Blue	 White/FAV-	 Media
 White/FAV-	 Media	 Pause	 Pause
 Pause	 Pause	 Mute	 Mute
 Mute	 Mute	 Menu	 Menu
 Menu	 Menu	 Exit	 Exit
 Exit	 Exit	 PR+	 Ch +
 PR+	 Ch +	 PR-	 Ch -
 PR-	 Ch -	 Up	 Up
 Up	 Up	 Down	 Down
 Down	 Down	 Right	 Right
 Right	 Right	 Left	 Left
 Left	 Left	 OK	 Ok
 OK	 Ok	 Vol+	 Vol +
 Vol+	 Vol +	 Vol-	 Vol -
 Vol-	 Vol -		





Originale		Sostituto	
	Tv/Radio		TV/R
	FAV		Pre Ch
	P/N		Options
	EPG		Guide
	Recall		Back

Originale		Sostituto	

