




 












 














 


Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Originale	Sostituto
 Back	 Back / Return
 Vol+	 Vol+
 CH List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Aspect	 Shift + Picture / Format
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Source	 AV / Input / RDS





Originale		Sostituto		Originale		Sostituto	
	Down		Down		Hold		Shift + Stop /
	Display		Display / Media		Subpage		Eject / Surround
	Red		Red / Netflix / Search		Subtitle		Subtitle / EQ
	<<		<< / Tune-				
	Green		Green / APP / Repeat				
	>>		>> / Tune+				
	Yellow		Yellow / YouTube / Repeat				
	I<<		I<< / Preset-				
	Blue		Blue / Prime Video / Random				
	>>I		>>I / Preset+				
	Text		Text / Goto				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Index		Info / Angle				
	Size		Zoom / Size				
	Reveal		D.Menu / Top				

