






 




Originale	Sostituto
TV Mute	Mute / Dimmer
Output Select	Smart / List
Tv/Video	AV / Input / RDS
Standby/On	Power
DV	Text / Goto
HDD	Shift + 7
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Originale	Sostituto
Tv Vol+	Vol+
Tv Vol-	Vol-
PR/CH/Input	CH+ / Page+
PR/CH/Input	CH- / Page-
Cancel	Exit / Cancel / Clear
Memo/Mark	Eject / Surround
F1	Yellow / YouTube / Repeat
F2	Blue / Prime Video / Random
Edit	Sleep / Timer
Prog	TV/Radio /
Top Menu	D.Menu / Top
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Navigation	Green / APP / Repeat





Originale	Sostituto
 Menu	 Menu / Home
 Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <</Slow-	 << / Tune-
 Play	 Play / Slow
 >>/Slow+	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Display	 Display / Media
 On Screen	 Info / Angle
 Recall	 Fav / Marker / PC
 →	 Sound / Title
 Rec	 Shift + Rec / Rec Mode
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Originale	Sostituto
 Angle/EE.Check	 Red / Netflix / Search
 EE	 Guide / EPG / -/-
 Dubbing	 Picture / Format
 Progressive Scan	 Zoom / Size
 Setup	 Setup / OPT /





Originale	Sostituto
	Power
	Mute / Dimmer
	TV/Radio /
	AV / Input / RDS
	Exit / Cancel / Clear
	Smart / List
	CH+ / Page+
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9

Originale	Sostituto
	0
	Guide / EPG / -/-

