








 

 

 

 
 
 
 

 
 
Originale	Sostituto
 Power	 Power
 Clock	 D. Menu
 Timer	 AV
 Open/Close	 Eject
 Menu	 Menu
 Enter iPod	 Ok
 Play iPod	 Shift + Play
 >>I iPod	 Shift + >>I
 Pause iPod	 Shift + Pause
 ↑ iPod	 Up
 ↓ iPod	 Down
 I<< iPod	 Shift + I<<
 Repeat iPod	 Shift + Text
 Shuffle iPod	 Shift + Subt
 iPod	 Green
 CD	 Yellow
 USB	 Blue

Originale	Sostituto
 AUX	 Red
 Tuner	 Smart
 Tuning Up	 Shift + Ch +
 Tuning Down	 Shift + Ch -
 Preset Up	 Ch +
 Preset Down	 Ch -
 Memory	 TV/R
 Mono	 Dual
 Dimmer	 3D
 Sleep	 Sleep
 Display	 Info
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Option	 Options
 Up	 Shift + Up
 Down	 Shift + Down





Originale	Sostituto
	SHIFT +  Shift + Right
	SHIFT +  Shift + Left
	SHIFT +  Shift + Ok
	 Right
	 Left
	 Text
	 Subt
	 Pause
	 I<<
	 Stop
	 <<
	 >>
	 Play
	 >>I
	 1
	 2
	 3

Originale	Sostituto
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Exit
	 Pre Ch

