


 





 
 




 
 
 
 


 

 







 






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang.	 Dual
 [=].	 Subt
 Home	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Originale	Sostituto
 Input	 AV
 P+	 Ch +
 P-	 Ch -
 [G]	 Guide
 i	 Info
 ←	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Media
 YouTube	 TV/R
 Menu	 Menu
 *1	 Format
 <<	 <<





Originale		Sostituto		Originale		Sostituto	
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

