



Originale	Sostituto	Originale	Sostituto
	Power		Power
	Info		Info / Angle
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/--
	Radio		TV/Radio /
	VOD		Display / Media
	HD		AV / Input / RDS
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Page Up		Shift + CH+ /
	Page Down		Shift + CH- /

Page-

Originale	Sostituto	Originale	Sostituto
	<<		<< / Tune-
	<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Vol+		Vol+
	Recordings		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Originale		Sostituto		Originale		Sostituto	
[5]	5	[TAPES 5]	5				
[6]	6	[TUNER 6]	6				
[7]	7	[AUX-HDD 7]	7				
[8]	8	[USB 8]	8				
[9]	9	[BLUETOOTH 9]	9				
[0]	0	[HDMI-BAT 0]	0				
[Red]	Red	[NETFLIX SEARCH]	Red / Netflix / Search				
[Green]	Green	[APP REPEAT]	Green / APP / Repeat				
[FAV Yellow]	Yellow / Fav	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat				
[FAV Yellow]	Yellow / Fav	[PC FAV MARKER]	Fav / Marker / PC				
[Blue]	Blue / Subtitle	[Prime Video RANDOM]	Blue / Prime Video / Random				
[Blue]	Blue / Subtitle	[EQ SUBTITLE]	Subtitle / EQ				

