

 



 



 








 




 



 



 



 



 











 















Originale		Sostituto		Originale		Sostituto	
	Power Audio		Power		0		0
	Function		Smart / List		Subtitle		Subtitle / EQ
	Input		AV / Input / RDS		Prog / Memo		Fav / Marker / PC
	Sleep / Dimmer		Sleep / Timer		Repeat		Green / APP / Repeat
	Sleep / Dimmer		Shift + Mute / Dimmer		Clear		Exit / Cancel / Clear
	Return		Back / Return		Top Menu		D.Menu / Top
	1		1		Up / Preset+		Up
	2		2		Up / Preset+		Shift + >>1 / Preset+
	3		3		Menu		Menu / Home
	Surround		Eject / Surround		Left / Tuning-		Left
	4		4		Left / Tuning-		Shift + << /
	5		5		Enter		OK
	6		6		Right / Tuning+		Right
	Scan Mode		TV/Radio /		Right / Tuning+		Shift + >> /
	7		7		Set Up		Setup / OPT /
	8		8		Down / Preset-		Down
	9		9		Down / Preset-		Shift + I<< / Preset-





Originale		Sostituto		Originale		Sostituto	
	Display		Display / Media				
	Stop		Stop / Hold				
	Play / FM Mode		Play / Slow				
	Pause		Pause / Step / Freeze				
	Volume+		Vol+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Muting		Mute / Dimmer				
	<< / Slow-		<< / Tune-				
	>> / Slow+		>> / Tune+				
	Volume-		Vol-				

