










 



 











 







 



 



















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV / Input / RDS
 -/--	 Guide / EPG / -/--
 Tv	 TV/Radio /
 TX	 Text / Goto
 Sel	 OK

Originale	Sostituto
 →←	 Smart / List
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol+
 Vol-	 Vol-
 Info	 Info / Angle
 Timer	 Sleep / Timer
 Syst	 Setup / OPT /
 Store	 Zoom / Size
 Menu	 Menu / Home
 P100	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Originale	Sostituto	Originale	Sostituto
	Yellow Yellow / YouTube / Repeat		Yellow / YouTube / Repeat
	Blue Blue / Prime Video / Random		Blue / Prime Video / Random
	Clock/Sub Subtitle / EQ		Subtitle / EQ
	Update Back / Return		Back / Return
	Mix Picture / Format		Picture / Format
	Double D.Menu / Top		D.Menu / Top
	Reveal Display / Media		Display / Media
	Hold Stop / Hold		Stop / Hold
	Stereo On/Off Audio / Lang I/II		Audio / Lang I/II
	A-B Mono Sound / Title		Sound / Title
	PS ↔ Exit / Cancel / Clear		Exit / Cancel / Clear

Originale	Sostituto

