



| Originale | Sostituto |
|-----------|--------------------|
| | Zoom / Size |
| | Power |
| | TV/Radio / |
| | Guide / EPG / -/-- |
| | Info / Angle |
| | Picture / Format |
| | AV / Input / RDS |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | Smart / List |

| Originale | Sostituto |
|-----------|-----------------------|
| | 0 |
| | Display / Media |
| | Setup / OPT / |
| | Up |
| | Menu / Home |
| | Left |
| | OK |
| | Right |
| | Back / Return |
| | Down |
| | Exit / Cancel / Clear |
| | Vol+ |
| | Fav / Marker / PC |
| | CH+ / Page+ |
| | Vol- |
| | Audio / Lang I/II |
| | CH- / Page- |



