

 









Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 Bluetooth/Dock	 9
 FM/CD	 3
 Audio In/USB	 AV / Input / RDS
 Up	 Up
 Down	 Down
 >>	 >> / Preset+
 <<	 << / Preset-
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Play/Pause	 Play / Slow
 Menu	 Menu / Home
 RDS/Display	 Display / Media
 Repeat/ Shuffle	 Green / APP / Repeat

Originale	Sostituto
 Prog	 TV/Radio /
 Sound	 Sound / Title
 Clock	 Sleep / Timer
 Sleep/Timer	 Setup / OPT /

