







 





























Originale	Sostituto
	 Info / Angle
	 Power
	 Text / Goto
	 Audio / Lang I/II
	 Shift + 2
	 Eject / Surround
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Display / Media
	 0

Originale	Sostituto
	 Shift + Menu /
	 Smart / List
	 Back / Return
	 Menu / Home
	 Zoom / Size
	 Setup / OPT /
	 Up
	 CH+ / Page+
	 Left
	 OK
	 Right
	 Down
	 CH- / Page-
	 Vol+
	 Mute / Dimmer
	 TV/Radio /
	 Vol-



