 















 



 



 





 












 






 





















Originale		Sostituto		Originale		Sostituto	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		0		0
	P-		CH- / Page-		-/--		Guide / EPG / -/--
	P+		CH+ / Page+		Contrast-		I<< / Preset-
	Power 2		Shift + Power		Contrast+		>>I / Preset+
	[+]		Display / Media		Brightness-		Down
	PP		Back / Return		Brightness+		Up
	[]		Info / Angle		Text		Text / Goto
	[]↔		Picture / Format		Text Subcode		Subtitle / EQ
	1		1		Text Hold		Shift + Stop /
	2		2		Text Size		Zoom / Size
	3		3		Text Reveal		Smart / List
	4		4		Text Index / Play		Play / Slow
	5		5		Text Mix		Shift + Text /
	6		6		Text Cancel		Exit / Cancel / Clear





Originale		Sostituto		Originale		Sostituto	
	Red / Rec		Red / Netflix / Search				
	Red / Rec		Rec / Rec Mode				
	Green / Stop		Green / APP / Repeat				
	Green / Stop		Stop / Hold				
	Yellow / <<		Yellow / YouTube / Repeat				
	Yellow / <<		<< / Tune-				
	Blue / >>		Blue / Prime Video / Random				
	Blue / >>		>> / Tune+				





Originale		Sostituto		Originale		Sostituto	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Vol-		Vol-		9		9
	Vol+		Vol+		0		0
	P-		CH- / Page-		-/--		Guide / EPG / -/--
	P+		CH+ / Page+		Text		Text / Goto
	Power 2		Shift + Power		Text Subcode		Subtitle / EQ
	[+]		Display / Media		Text Hold		Shift + Stop /
	PP		Back / Return		Text Size		Zoom / Size
	[]		Info / Angle		Text Reveal		Smart / List
	[]↔		Picture / Format		Play		Play / Slow
	1		1		Text Mix		Shift + Text /
	2		2		Text Cancel		Exit / Cancel / Clear
	3		3		Rec		Rec / Rec Mode
	4		4		Stop		Stop / Hold
	5		5		<<		<< / Tune-
	6		6		>>		>> / Tune+

