

 

 



















 



 








 





















 


 


 












 










 
 



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/AV	 AV / Input / RDS
 Q.View	 Fav / Marker / PC
 Up	 Up
 Prog+	 CH+ / Page+

Originale	Sostituto
 Prog-	 CH- / Page-
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 I/II	 Audio / Lang I/II
 Info	 Info / Angle
 P.Timer	 Sleep / Timer
 Swap	 Back / Return
 Picture	 Picture / Format
 Timer	 Shift + Sleep / Timer
 Sound	 Sound / Title
 Red	 Red / Netflix / Search





Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Index	 Display / Media
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Mix	 Shift + Text /
 Reveal	 D.Menu / Top
 Cancel	 Exit / Cancel / Clear
 Sub Code	 Shift + Back / Return

Originale	Sostituto

