 



 



 















 



 





 

 



 



 

 

 





 



 

 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Enter		Shift + OK
	Mute		Mute / Dimmer		Tv		TV/Radio /
	Right/Vol+		Right		Scart		>> / Tune+
	Left/Vol-		Left		AV		AV / Input / RDS
	1		1		PC		Fav / Marker / PC
	2		2		Sleep		Sleep / Timer
	3		3		Freeze		Pause / Step / Freeze
	4		4		Wide		Picture / Format
	5		5		Display		Display / Media
	6		6		Menu		Menu / Home
	7		7		e		Info / Angle
	8		8		MPX		Exit / Cancel / Clear
	9		9		PIP/PBP		D.Menu / Top
	0		0		Up CH		Up
	CH+		CH+ / Page+		Down CH		Down
	CH-		CH- / Page-		Vol-		Vol-
	Recall		Back / Return		Vol+		Vol+



