








 

 
 

 




Originale		Sostituto		Originale		Sostituto	
	Off/On		Power		Cancel		Exit / Cancel / Clear
	Sleep		Sleep / Timer		Random		Blue / Prime Video / Random
	Display		Display / Media		Repeat		Green / APP / Repeat
	FM Mode		AV / Input / RDS		CD	+	Shift + 3
	Tuner / Band	+	Shift + 6		CD Pause		Pause / Step / Freeze
	1		1		CD I<<</>>>		<< / Tune-
	2		2		CD I<<</>>>		I<<< / Preset-
	3		3		CD >>>/>>>I		>> / Tune+
	4		4		CD >>>/>>>I		>>I / Preset+
	5		5		CD Play		Play / Slow
	6		6		CD Stop		Stop / Hold
	7		7		TAPE Reverse		Menu / Home
	8		8		TAPE Counter		Info / Angle
	9		9		TAPE Deck 1/2		Smart / List
	10/0		0		TAPE Rec Pause	+	Shift + Rec / Rec Mode
	+10		Guide / EPG / -/--		TAPE <<		Down
	Program		TV/Radio /		TAPE <<	+	Shift + << /

Program

Tune-





Originale	Sostituto
 TAPE >>	 Up
 TAPE >>	 Shift + >> /
 TAPE Stop	 OK
 TAPE Stop	 Shift + Stop /
 TAPE Rev. Play	 Left
 TAPE Play	 Right
 TAPE Play	 Shift + Play /
 Volume-	 Vol-
 Volume+	 Vol+

Originale	Sostituto

