 





















 



 













Originale	Sostituto
 Power	 Power
 123	 1
 Colors	 Green / APP / Repeat
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Ok	 OK
 Back	 Back / Return
 Home	 Menu / Home
 Play/Pause	 Play / Slow
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Netflix	 Red / Netflix / Search
 Prime video	 Blue / Prime Video / Random

Originale	Sostituto
 Rakuten Tv	 Yellow / YouTube / Repeat

