



 

 





 


 









 

 









 











 



 

 



 




 







Originale	Sostituto	Originale	Sostituto
 PWR	 Power	 Yellow/FAV	 Yellow / YouTube / Repeat
 Tv/Rad	 TV/Radio /	 Blue/A-Z	 Blue / Prime Video / Random
 Text	 Text / Goto	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/--
 2	 2	 Info	 Info / Angle
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Red/Opt	 Red / Netflix / Search	 Pause	 Pause / Step / Freeze
 Green/AV+	 Green / APP / Repeat	 Play	 Play / Slow

Originale	Sostituto	Originale	Sostituto
 PWR	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 TV INPUT
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 OK	 OK
 CLEAR	 EXIT	 CANCEL	 RETURN
 EXIT	 LIST	 SMART	 CH PAGE
 CANCEL	 MEDIA	 DISPLAY	 VOL
 VOL+	 TV	 DVD	 CD - STB
 VOL-	 VIDEO	 TAPE	 TUNER
 TV	 AUX - HDD	 USB	 BLUETOOTH
 1	 7	 HDMI - SAT	 PC
 2	 GUIDE EPG	 0	 FAV MARKER
 3	 NETFLIX	 APP	 YouTube
 4	 SEARCH	 REPEAT	 Prime Video
5	REPEAT	REPEAT A-B	RANDOM
6	Mandis SHOP	www.mandis.tv	





	Originale	Sostituto
	<<	TUNE-  << / Tune-
	Stop	HOLD  Stop / Hold
	>>	TUNE+  >> / Tune+
	Rec	REC MODE  Rec / Rec Mode
	Slow	SHIFT +  Shift + Play /
	List	LIST SMART  Smart / List
	A-B	TOP MENU D.MENU  D.Menu / Top
	Mark	PC FAV MARKER  Fav / Marker / PC
	Jump	EQ SUBTITLE  Subtitle / EQ
	PIP	SIZE ZOOM  Zoom / Size
	Swap	OPT-TOOLS SETUP  Setup / OPT /
	Move	MEDIA DISPLAY  Display / Media
	Sleep	TIMER SLEEP  Sleep / Timer

	Originale	Sostituto

