

 

 

 

 



 

 

 

 

 

 

 



 







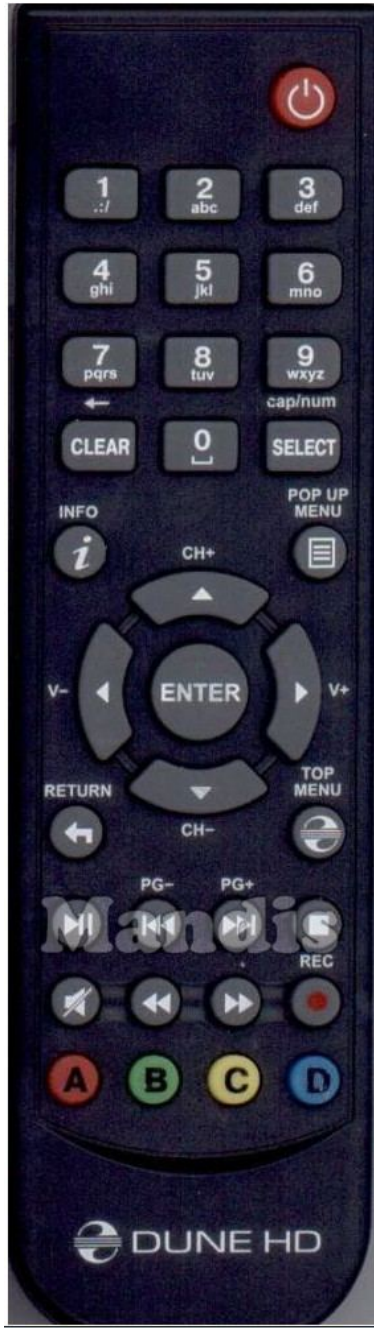 


Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ←Clear	 Fav / Marker / PC
 Select/cap/num	 Guide / EPG / -/--
 i/Info	 Info / Angle
 [=]	 Text / Goto
 Pop Up Menu	 Smart / List
 Return	 Back / Return

Originale	Sostituto
 Top Menu	 D.Menu / Top
 Up	 Up
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Down	 Down
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Enter	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 I<</PG-	 I<< / Preset-
 >>I/PG+	 >>I / Preset+
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 <<	 << / Tune-





Originale	Sostituto
	>> / Tune+
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Originale	Sostituto

