



Originale	Sostituto
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Time	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Language	 Audio / Lang I/II
 Title	 Shift + Sound / Title

Originale	Sostituto
 Angle	 Info / Angle
 Zoom	 Zoom / Size
 Slow	 Shift + Play /
 Vol-	 Vol-
 Vol+	 Vol+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Menu	 Menu / Home
 Display	 Display / Media
 Setup	 Setup / OPT /
 Goto	 Text / Goto
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK





	Originale	Sostituto
REV	<<	TUNE- << / Tune-
FWD	>>	TUNE+ >> / Tune+
PREV	I<<	PRESET- I<< / Preset-
NEXT	>>I	PRESET+ >>I / Preset+
A-B	A-B	Yellow / YouTube / Repeat
REPEAT	Repeat	Green / APP / Repeat
STEP	Step	SHIFT + STEP-FREEZE Shift + Pause / Step / Step /
RETURN	Return	BACK Back / Return
PROG	Prog	PROGRAM TV/RADIO TV/Radio /
P/N	P/N	FORMAT PICTURE Picture / Format
PBC	PBC	TOP MENU D.MENU D.Menu / Top
RANDOM	Random	Prime Video Blue / Prime Video / Random
DIGEST	Digest	SHIFT + MEDIA DISPLAY Shift + Display / Media
L/R	L/R	TITLE SOUND Sound / Title
MODE	Mode	LIST SMART Smart / List
PSCAN/NORMAL	PC Scan/Normal	RDS AV INPUT AV / Input / RDS

	Originale	Sostituto

