


 


 


 
 
 






 









Originale	Sostituto
	 Power
	 Source
	 [=]
	 I-II
	 [...]
	 Red
	 Green
	 Yellow
	 Blue
	 Menu
	 EPG
	 Up
	 <<
	 Play
	 Pause
	 >>
	 Down

Originale	Sostituto
	 Option
	 [i+]
	 Vol+
	 Stop
	 Page+
	 Vol-
	 Mute
	 Page-
	 1
	 2
	 3
	 FAV
	 4
	 5
	 6
	 J/Slideshow
	 7





Originale		Sostituto	
	8		8
	9		9
	Rotate		Display / Media
	Setup		Setup / OPT /
	0		0
	[<>]		Picture / Format
	Zoom		Zoom / Size

Originale		Sostituto	

