

 



 

 

 

 





 























Originale	Sostituto
 Power	 Power
 S.Mode	 Sound / Title
 MTS	 Text / Goto
 P.Mode	 Picture / Format
 Caption	 Subtitle / EQ
 Sleep	 Sleep / Timer
 P.Size	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 Jump	 Smart / List
 .	 Display / Media
 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Down	 Shift + Down
 Left	 Left
 OK	 OK
 Info	 Info / Angle
 Menu	 Menu / Home





Originale	Sostituto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 List	 Shift + Smart / List
 FAV CH	 Fav / Marker / PC
 Timer	 Shift + Sleep / Timer
 Freeze	 Pause / Step / Freeze

Originale	Sostituto

