






































Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Menu Down	 Down
Mute	 Mute / Dimmer	Volume+	 Vol+
Update	 Play / Slow	Chan.Up	 CH+ / Page+
Txt Stop	 Stop / Hold	Volume-	 Vol-
Menu audio	 Audio / Lang I/II	Chan.Down	 CH- / Page-
Subt.List	 Subtitle / EQ	1	 1
Txt Expand	 Zoom / Size	2	 2
Sleep Timer	 Sleep / Timer	3	 3
Return TV	 TV/Radio /	4	 4
Menu video	 D.Menu / Top	5	 5
Text	 Text / Goto	6	 6
TV/AV	 AV / Input / RDS	7	 7
Menu	 Menu / Home	8	 8
Menu Up	 Up	9	 9
Info	 Info / Angle	0/10	 0
Menu Left	 Left	2.Fav P/C 2.	 Fav / Marker / PC
Menu Right	 Right	Red	 Red / Netflix / Search



Originale	Sostituto	Originale	Sostituto
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

