















 
























Originale	Sostituto
	 Mute / Dimmer
	 Power
	 Shift + Picture / Format
	 Sound / Title
	 Picture / Format
	 Guide / EPG / -/-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Smart / List
	 0

Originale	Sostituto
	 Fav / Marker / PC
	 Subtitle / EQ
	 Text / Goto
	 Shift + Text /
	 Zoom / Size
	 Shift + Stop /
	 D.Menu / Top
	 Eject / Surround
	 Display / Media
	 Info / Angle
	 Shift + Fav / Marker / PC
	 TV/Radio /
	 Audio / Lang I/II
	 Menu / Home
	 Up
	 AV / Input / RDS
	 Left





Originale	Sostituto
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 Sleep	 Sleep / Timer
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Prog	 Shift + TV/Radio / Program
 CH -	 CH- / Page-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop/Rec	 Stop / Hold
 HDMI Source	 Shift + 0
 DTV Source	 Shift + 1
 I<<	 I<< / Preset-

Originale	Sostituto
 >>	 >> / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

