
 








Originale	Sostituto
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step /
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Originale	Sostituto
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Shift + CH+ /
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





Originale		Sostituto	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Fav.		Fav / Marker / PC
	0		0
	P<P		Back / Return
	<<		<< / Tune-
	>>		>> / Tune+
	Timers		Sleep / Timer
	Lib.		D.Menu / Top
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

Originale		Sostituto	

