

















 

 





 





 








 



 

 

 

 

 

 

 



 

 









Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PR.List	 Smart / List
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Pic Mode	 Picture / Format
 S.Mode	 Sound / Title

 

Originale	Sostituto
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 DNR	 Setup / OPT /
 MTS	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Play/Pause / Size	 Play / Slow
 Play/Pause / Size	 Shift + Zoom /
 Play/Pause / Size	 Pause / Step / Freeze
 Stop / Reveal	 Stop / Hold
 EPG	 Guide / EPG / --
 Info	 Info / Angle
 I<< / Text	 Text / Goto
 I<< / Text	 I<< / Preset-
 >>I / Index	 >>I / Preset+
 << / Subpage	 << / Tune-
 >> / Hold	 Shift + Stop /

Hold

Originale	Sostituto
 >> / Hold	 >> / Tune+

