

 









 

 




















 

















Originale	Sostituto
 Subtitle	 Subtitle / EQ
 Format	 Picture / Format
 Red / Timer	 Sleep / Timer
 Up / CH+	 Up
 Down / CH-	 Down
 Red / Timer	 Red / Netflix / Search
 Right / Vol+	 Right
 Left / Vol-	 Left
 Page Up	 CH+ / Page+
 Right / Vol+	 Vol+
 Left / Vol-	 Vol-
 OK	 OK
 Back	 Back / Return
 TV/R	 TV/Radio /
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--
 Fav	 Fav / Marker / PC

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Page down	 CH- / Page-
 Blue	 Blue / Prime Video / Random
 Prev	 I<< / Preset-
 Next	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 FRW	 << / Tune-
 Play	 Play / Slow
 FFW	 >> / Tune+
 7	 7
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 1	 1





Originale	Sostituto	Originale	Sostituto
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
Power	Power	Power	Power
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0
List	List	LIST SMART	Smart / List
Lang	Lang	LANG I/II AUDIO	Audio / Lang I/II
TXT	TXT	GOTO TEXT	Text / Goto

Originale	Sostituto	Originale	Sostituto

