




 

 




 





 




 




Originale	Sostituto
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Originale	Sostituto
 V-	 Vol-
 Home	 Menu / Home
 P-	 CH- / Page-
 [G]	 Guide / EPG / -/--
 i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Rakuten Tv	 TV/Radio /
 twitch	 Shift + Green / APP / Repeat





Originale	Sostituto
*1	SETUP Setup / OPT /
	NETFLIX SEARCH Red / Netflix / Search
	APP REPEAT Green / APP / Repeat
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	Prime Video RANDOM Blue / Prime Video / Random
	TUNE- << / Tune-
	STEP-FREEZE Pause / Step / Freeze
	TUNE+ >> / Tune+
	REC MODE Rec / Rec Mode
	SLOW Play / Slow
	HOLD Stop / Hold

Originale	Sostituto

