



































Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	TV/SAT	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
H/V Play	 Play / Slow	Menu Up	 Up
Dec/Pause	 Pause / Step / Freeze	Info	 Info / Angle
East	 Rec / Rec Mode	Menu Left	 Left
Lang./Rewind	 << / Tune-	OK Enter	 OK
LNB F.Forward	 >> / Tune+	Menu Right	 Right
West	 << / Preset-	Exit	 Exit / Cancel / Clear
Dev	 >> / Preset+	Menu Down	 Down
Lang./Rewind	 Sound / Title	Back	 Back / Return
Audio	 Audio / Lang I/II	Volume+	 Vol+
Subt.List	 Subtitle / EQ	SAT Sky	 Smart / List
Zoom	 Zoom / Size	CH/Page+	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
TV	 TV/Radio /	Display	 Display / Media
Opt?	 Setup / OPT /	CH/Page-	 CH- / Page-
Text	 Text / Goto	1. ?	 1



Originale	Sostituto	
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote		Guide / EPG / -/--
0/10		0
FAV Pref.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
		Shift + Mute / Dimmer
Freeze		Shift + Pause / Step / Freeze

Originale	Sostituto	
		Shift + CH+ /
		Shift + CH- /
TV		Shift + 1
Video		Shift + 4
Epg		Shift + Guide / EPG / -/--
App		Shift + Green / APP /

