



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 EPG	 Guide / EPG / -/-
 7	 7	 TV	 Display / Media
 8	 8	 TV	 AV / Input / RDS
 9	 9	 Radio	 TV/Radio /
 < Prev	 I<< / Preset-	 Red	 Red / Netflix / Search
 0	 0	 Green	 Green / APP / Repeat
 Next>	 >>I / Preset+	 Yellow	 Yellow / YouTube / Repeat
 Help	 D.Menu / Top	 Blue	 Blue / Prime Video / Random
 Timer	 Sleep / Timer	 Vol+	 Vol+
 Menu	 Menu / Home	 Mute	 Mute / Dimmer
Info	Info / Angle	CH+	CH+ / Page+

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 EPG	 Guide / EPG / -/-
 7	 7	 TV	 Display / Media
8	8	TV	AV / Input / RDS
9	9	Radio	TV/Radio /
< Prev	I<< / Preset-	Red	Red / Netflix / Search
0	0	Green	Green / APP / Repeat
Next>	>>I / Preset+	Yellow	Yellow / YouTube / Repeat
Help	D.Menu / Top	Blue	Blue / Prime Video / Random
Timer	Sleep / Timer	Vol+	Vol+
Menu	Menu / Home	Mute	Mute / Dimmer
Info	Info / Angle	CH+	CH+ / Page+





Originale		Sostituto	
	Vol-		Vol-
	PVR		Smart / List
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

Originale		Sostituto	

