



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Timer	 Sleep / Timer
 0	 0
 Game	 Smart / List
 Page Up	 Shift + CH+ /
 EPG	 Guide / EPG / -/--
 Recall	 Back / Return

Originale	Sostituto
 Page Down	 Shift + CH- /
 Fav	 Fav / Marker / PC
 Info	 Info / Angle
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Right / Vol+	 Vol+
 Right / Vol+	 Right
 Menu	 Menu / Home
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Red / Scan	 Red / Netflix / Search
 Green / Zoom	 Zoom / Size
 Green / Zoom	 Green / APP / Repeat



