 







 



 



 



 



 



 



 

 

 



 



 

 







 
 
 


 














Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		↓		<< / Tune-
	1		1		C-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/OPC		OK
	5		5		Right		Right
	6		6		Salir		Exit / Cancel / Clear
	7		7		Down		Down
	8		8		Info		Info / Angle
	9		9		Audio		Audio / Lang I/II
	Menu		Menu / Home		"		Setup / OPT /
	0		0		[=]		Text / Goto
	Guia		Guide / EPG / -/-		←		Back / Return
	Vol+		Vol+		Red/Fav+		Red / Netflix / Search
	↑		>> / Tune+		Green/Radio/TV		Green / APP / Repeat
	C+		CH+ / Page+		Yellow/Ayuda		Yellow / YouTube / Repeat





Originale	Sostituto
 ACCEPTAR Blue/Aceptar	 Prime Video / RANDOM Blue / Prime Video / Random

Originale	Sostituto

