



 




 


 

 


 

Originale	Sostituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
TV	TV
Up	Up
Left	Left
OK/Select	OK
Right	Right

Originale	Sostituto
Down	Down
Guida	Shift + Guide / EPG / -/--
Piloto	Display / Media
Serv	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
E	Setup / OPT /
Mute	Mute / Dimmer
+/Info	Info / Angle
Perso	Text / Goto
Tv/Sat	TV/Radio /





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--/X/Prefe	 Guide / EPG / -/--
 0	 0
 ->/Salir/AV	 Exit / Cancel / Clear
 Vol+	 Vol+
 Up	 Up
 ZAP+	 CH+ / Page+
 Left	 Left

Originale	Sostituto
 Right	 Right
 Vol-	 Vol-
 Down	 Down
 ZAP-	 CH- / Page-
 Menu	 Menu / Home
 Guia	 Shift + Guide / EPG / -/--
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 E	 Setup / OPT /
 Mute	 Mute / Dimmer

