



Originale		Sostituto		Originale		Sostituto	
	Power		Power		5		5
	-/-- TV		Guide / EPG / -/--		5 TV		Shift + 5
	TV		TV/Radio /		6		6
	DVD		Smart / List		6 TV		Shift + 6
	Open/Close		Eject / Surround		7		7
	Mute		Mute / Dimmer		7 TV		Shift + 7
	Display		Display / Media		8		8
	PP		Back / Return		8 TV		Shift + 8
	TV/AV		AV / Input / RDS		9 TV		Shift + 9
	1		1		9		9
	1 TV		Shift + 1		0 TV		Shift + 0
	2		2		0		0
	2 TV		Shift + 2		-/--		Shift + Guide / EPG / -/--
	3		3		+10		Fav / Marker / PC
	3 TV		Shift + 3		Audio		Audio / Lang I/II
	4		4		Setup		Setup / OPT /
	4 TV		Shift + 4		Menu DVD		Menu / Home







Originale	Sostituto
Menu Tv	D.Menu / Top
CH+	CH+ / Page+
CH-	CH- / Page-
Vol+	Vol+
Vol-	Vol-
Up	Up
Down	Down
Left	Left
Right	Right
Enter	OK
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Stop	Stop / Hold

Originale	Sostituto
Repeat A-B	Yellow / YouTube / Repeat
Program	Shift + TV/Radio / Program
Slow	Shift + Play /
Search	Red / Netflix / Search
Zoom	Zoom / Size
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Angle	Info / Angle
Subtitle	Subtitle / EQ
PAL/NTSC	Picture / Format
?	Shift + Info / Angle
+	Shift + Setup / OPT / Tools
+	Shift + Zoom /
[><]	Shift + Subtitle / EQ
Timer	Sleep / Timer
X	Shift + Exit / Cancel / Clear
[/≡]	Shift + Text / Goto





Originale		Sostituto		Originale		Sostituto	
	[≡]		Text / Goto				

