



Originale		Sostituto		Originale		Sostituto	
1	1	TV 1	1	A-B	A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
2	2	DVD 2	2	ANGLE	Angle	ANGLE INFO	Info / Angle
3	3	CD - BTB 3	3	REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
4	4	VIDEO 4	4	RETURN	Return	RETURN BACK	Back / Return
5	5	TAPE 5	5	OSD	OSD	MEDIA DISPLAY	Display / Media
6	6	TUNER 6	6	I<<	I<<	SHIFT + PRESET- I<<	Shift + I<< / Preset-
7	7	AUX - HDD 7	7	I<<	I<<	PRESET- I<<	I<< / Preset-
8	8	USB 8	8	>>	>>	SHIFT + PRESET+ >>	Shift + >>  / Preset+
9	9	BLUETOOTH 9	9	>>	>>	PRESET+ >>	>>  / Preset+
0	0	HDMI - BAT 0	0	<<	<<	TUNE- <<	<< / Tune-
ZOOM	Zoom	SIZE ZOOM	Zoom / Size	<<	<<	SHIFT + TUNE- <<	Shift + << /
MODE	Mode	SHIFT + MEDIA DISPLAY	Shift + Display / Media	>>	>>	SHIFT + TUNE+ >>	Shift + >> /
TITLE	Title	TITLE SOUND	Sound / Title	>>	>>	TUNE+ >>	>> / Tune+
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II	ENTER	Enter	OK	OK
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ	PLAY	Play	SLOW PLAY	Play / Slow
MENU	Menu	HOME MENU	Menu / Home	PAUSE	Pause	STEP - FREEZE PAUSE	Pause / Step / Freeze
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /	STOP	Stop	HOLD STOP	Stop / Hold



