


Originale	Sostituto
 Standby	 Power
 OSD	 Display / Media
 Menu	 Menu / Home
 Open / Close	 Eject / Surround
 V.Mode	 Picture / Format
 1	 1
 2	 2
 3	 3
 Subtitle	 Subtitle / EQ
 4	 4
 5	 5
 6	 6
 Title / PBC	 Sound / Title
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle

Originale	Sostituto
 Search	 Red / Netflix / Search
 0	 0
 10+	 Guide / EPG / -/--
 Setup	 Setup / OPT /
 Up	 Up
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 Left	 Left
 Play / Enter	 OK
 Play / Enter	 Play / Slow
 Right	 Right
 Prev	 I<< / Preset-
 F.Rev	 << / Tune-
 Down	 Down
 F.Fwd	 >> / Tune+
 Next	 >>I / Preset+
 Stop	 Stop / Hold

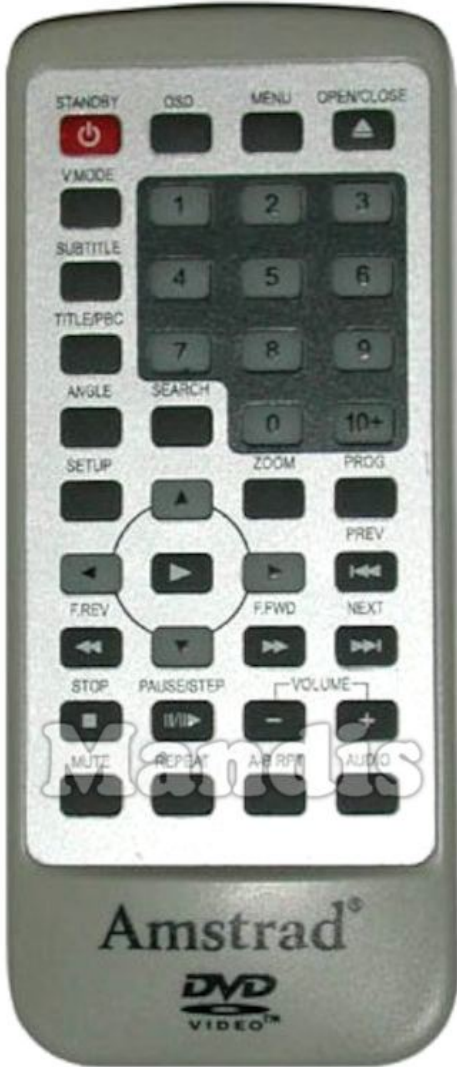



	Originale	Sostituto	Originale	Sostituto
	Pause / Step	Pause / Step / Freeze		
	Volume-	Vol-		
	Volume+	Vol+		
	Mute	Mute / Dimmer		
	Repeat	Green / APP / Repeat		
	A-B RPT	Yellow / YouTube / Repeat		
	Audio	Audio / Lang I/II		

