


















 



 



 


























 



 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Cancel		Exit / Cancel / Clear
	Auto Off		Shift + Power		Repeat		Green / APP / Repeat
	Sleep		Sleep / Timer		Random		Blue / Prime Video / Random
	Muting		Mute / Dimmer		Tape		Shift + 5
	1		1		CD		Shift + 3
	2		2		Tuner		Shift + 6
	3		3		AUX		Shift + 7
	Disc		Display / Media		EQ		Subtitle / EQ
	4		4		3D AI		Smart / List
	5		5		<<		<< / Tune-
	6		6		I<<		I<< / Preset-
	+10		Guide / EPG / -/--		>>I		>>I / Preset+
	7		7		>>		>> / Tune+
	8		8		V.Bass		Sound / Title
	9		9		</▼		Left
	0		0		</▼		Down
	Program		TV/Radio /		</▼		CH- / Page-



Program



Originale	Sostituto
 Stop	 Stop / Hold
 Play/Pause/▲	 Play / Slow
 Play/Pause/▲	 Right
 Play/Pause/▲	 Pause / Step / Freeze
 Play/Pause/▲	 Up
 Play/Pause/▲	 CH+ / Page+
 Volume-	 Vol-
 Volume+	 Vol+

Originale	Sostituto

