



Originale	Sostituto
Power	Power
Energy Saving	Sleep / Timer
AV Mode	Picture / Format
Input	AV / Input / RDS
Tv/Rad	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0
Q.Vlew	Setup / OPT /

Originale	Sostituto
Vol+	Vol+
FAV/Mark/Char/Nu	Fav / Marker / PC
P+	CH+ / Page+
Vol-	Vol-
3D	Zoom / Size
Mute/Delete	Mute / Dimmer
P-	CH- / Page-
Menu	Menu / Home
NetCast	Sound / Title
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Back	Back / Return





Originale		Sostituto		Originale	Sostituto
	Guide		Guide / EPG / -/--		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue/L/R/Select		Blue / Prime Video / Random		
	Text		Text / Goto		
	T.Opt		Shift + Setup / OPT / Tools		
	Subtitle		Subtitle / EQ		
	Stop		Stop / Hold		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Simplink		Display / Media		
	Info		Info / Angle		
	AD		Audio / Lang I/II		
	APP/*		Shift + Green / APP / Repeat		

