



Originale	Sostituto
Power	Power
Energy Saving	Sleep / Timer
AV Mode	Picture / Format
Input	AV / Input / RDS
Tv/Rad	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Smart / List
0	0
Q.Vlew	Setup / OPT /

Originale	Sostituto
Vol+	Vol+
FAV/Mark/Char/Nu	Fav / Marker / PC
P+	CH+ / Page+
Vol-	Vol-
3D	Zoom / Size
Mute/Delete	Mute / Dimmer
P-	CH- / Page-
Menu	Menu / Home
NetCast	Sound / Title
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
Back	Back / Return





	Originale	Sostituto
	Guide	GUIDE / EPG / -/--
	Red	Red / Netflix / Search
	Green	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat
	Blue/L/R/Select	Prime Video / Random
	Text	GOTO / TEXT
	T.Opt	SHIFT + OPT-TOOLS / Setup / OPT / Tools
	Subtitle	EQ / SUBTITLE
	Stop	HOLD / Stop / Hold
	Play	SLOW / Play / Slow
	Pause	STEP-FREEZE / Pause / Step / Freeze
	<<	TUNE- / << / Tune-
	>>	TUNE+ / >> / Tune+
	Simplink	MEDIA / DISPLAY
	Info	ANGLE / INFO
	AD	LANG I/II / AUDIO
	APP/*	SHIFT + APP / Repeat

Originale	Sostituto

